


HEINE Tiefenlupe mit 3,5 V Beleuchtung

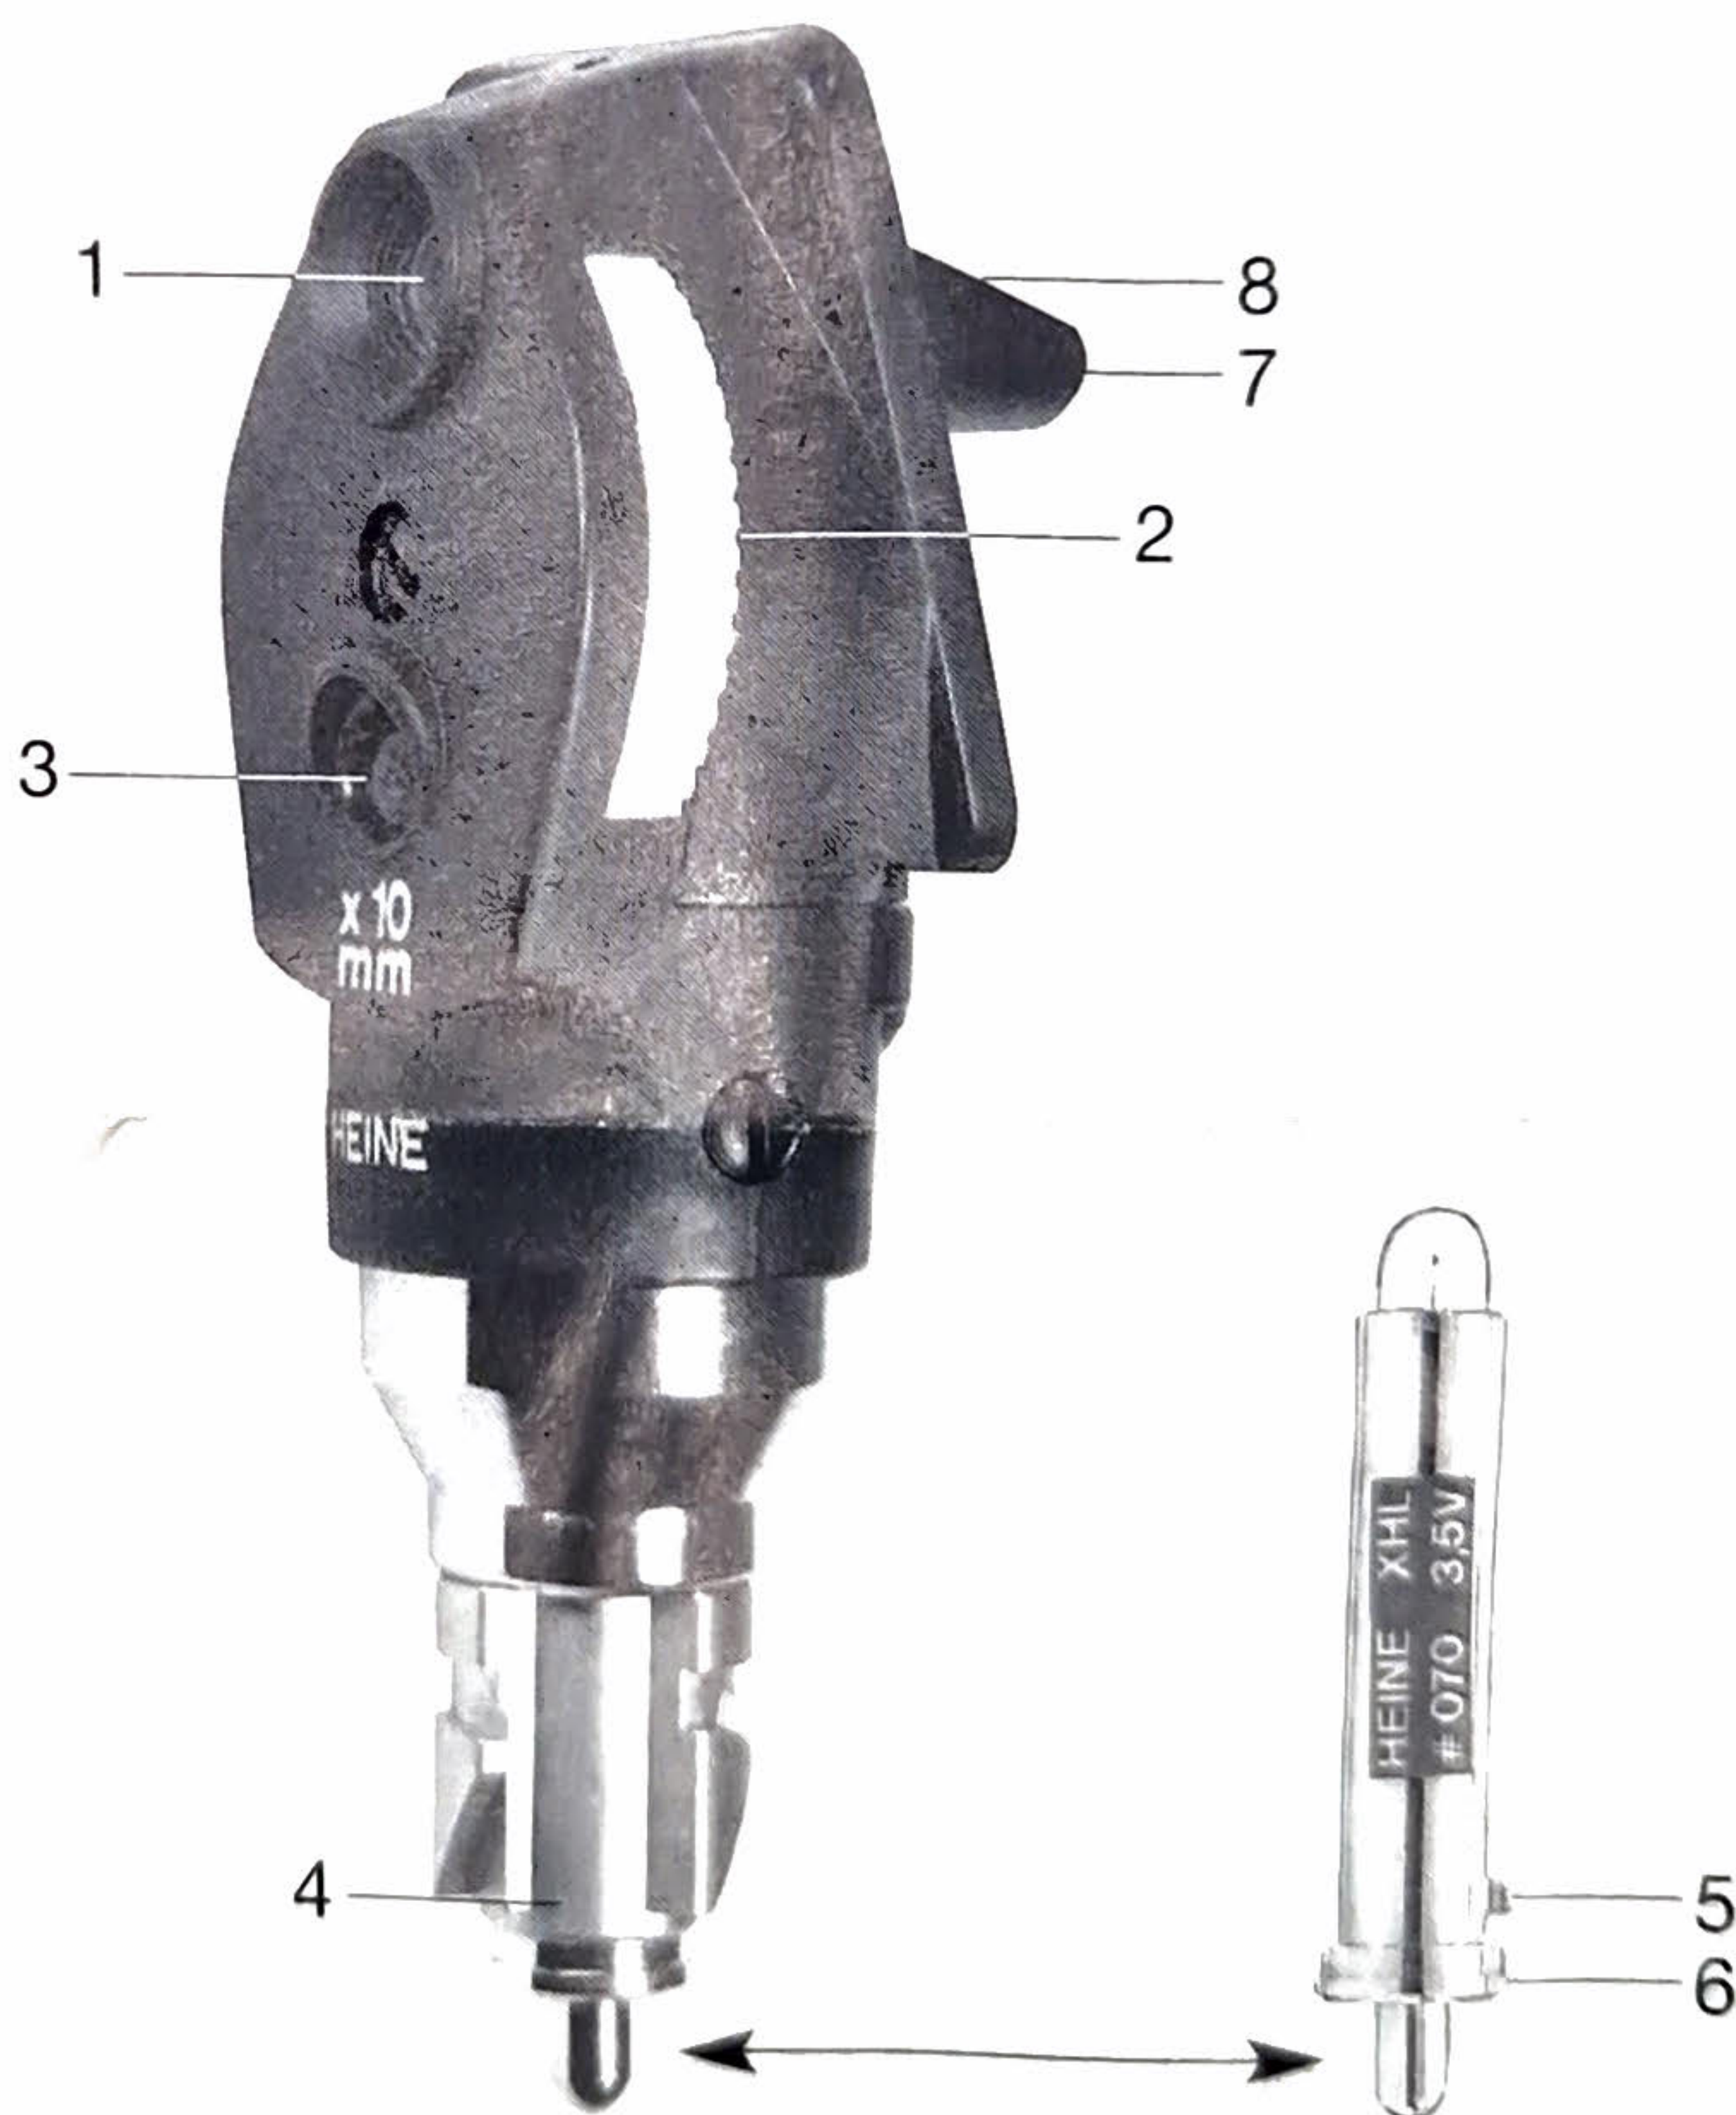

HEINE

HEINE Optotechnik GmbH & Co. KG

Kientalstr. 7 · 82211 Herrsching · Germany

Tel. +49(0)8152/38-0 · Fax +49(0)8152/38-202

E-mail: info@heine.com · www.heine.com

tec 8406

1/1.07



Instructions

HEINE Keyhole loupe

Read these instructions carefully before using the HEINE Keyhole loupe and keep them in a safe place for future reference.



In accordance with local regulations this product should be disposed of as an electronic device separately.

Using the instrument

This instrument permits inspections of bores and narrow apertures of not less than 0,3 mm diameter. It is equally useful as an illuminated viewer for variable examination distances.

The HEINE Keyhole loupe permit a continuous range of viewing distances from 5 to 250 mm.

Instructions for use

- Attach the keyhole loupe to the handle.
- Hold the handle so that brightness control can be operated by the thumb and the lens wheel (2) by the tip of the index finger
- Switch on handle and bring the keyhole loupe as close as possible to your right eye if you hold handle in your right hand (left-handed persons use left eye).
- View object to be examined through aperture (1) and focus by turning lens selection disc.

In case of very small bores and openings it is helpful to direct light onto the opening and rest the forward part of the instrument on it. Its bevelled opening facilitates positioning.

If you can estimate distance from object, adjust lens selection disc prior to starting inspection: The figures appearing in window (3) indicate average viewing distance according to lens selected.

Changing the bulb

- Remove the instrument from the handle.
- Remove bulb by its collar (6).
- Wipe dome of new bulb with a clean tissue. Insert bulb so that adjusting peg fit into groove (4).

Important note: The safe and reliable operation of the Instrument can only be guaranteed if an original HEINE XHL® Xenon Halogen bulb is fitted.

Cleaning

Wipe clean with soap solution or an alcohol-based cleaner which is recommended for use on plastic. Use a cotton bud or a micro-fiber cloth to clean the glass surface.

Accessories and Spare Parts

Keyhole loupe with 3,5 V bulb, without handle	T-02.24.105
Extension cord automatic plug	T-00.99.230
HEINE XHL® Xenon Halogen spare bulb 3,5 V	T-02.88.070